


PURLIN CLIP INSTALLATION TOOL | TP05185

INSTALLATION INSTRUCTIONS:

1. Install the wired clip on installation tool according to diagram below.
2. Raise tool and fastener assembly above flange. Place fastener against flange and pull straight down until fastener is firmly attached to flange.
3. To disengage tool, lift up after fastener has been engaged.

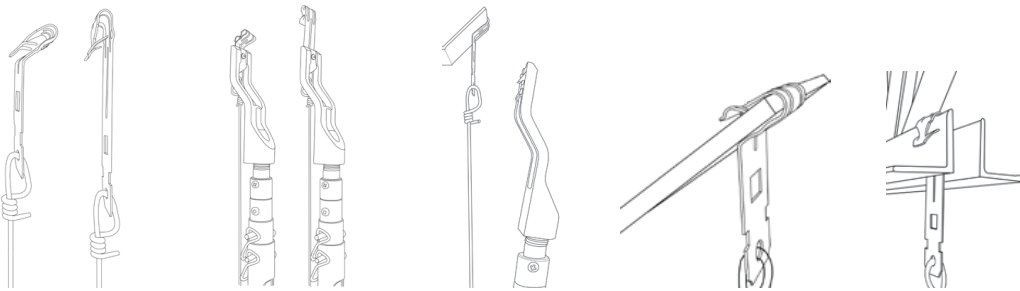

WARNING: Fasteners must be placed only as illustrated above. Always adhere to the specific clip's static load limit as stated by manufacturer.

SAFETY INSTRUCTIONS:

All safety regulations required by the job site must be observed. Special attention should be given to the following instructions when working overhead:

- **Wear a hard hat and safety glasses with side shields.**
- **When working above ground level, be sure the structure will support your weight.**
- **Be aware of personnel working above and below.**

This installation tool will work with all standard threaded poles, it will work best with ToolPro Adjustable Lag Poles, see chart below for more information.

| PART NO. | LENGTH | CONFIGURATION |
|----------|----------------|-------------------------------|
| TP05200 | 6 FT. - 12 FT. | Two sections of 6 FT. Poles |
| TP05220 | 4 FT. - 12 FT. | Three sections of 4 FT. Poles |
| TP05230 | 7 FT. - 18 FT. | Three sections of 6 FT. Poles |
| TP05240 | 8 FT. - 24 FT. | Three sections of 8 FT. Poles |

PLEASE NOTE: Must use the threaded adapter (TP05186) to attached purlin clip to lag poles